

MieleLogic

- Prepaid

 
Features in this guidance are dependent on the installed software

Prepaied

User guidance


Features in this guidance is dependent on the installed software

When the machine is vacant, the display changes regularly between three different informations.

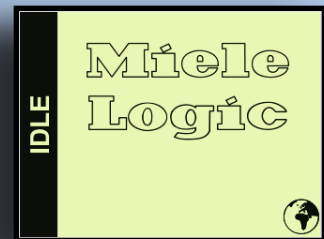

By pressing the little globe in the down right corner, another guidance language can be chosen.

 Language is an optional feature, and may in addition to Norwegian, show English, German, Swedish and Danish.

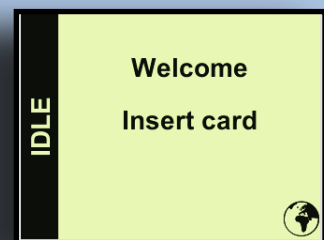


Starting the machine

Features in this guidance are dependent on the installed software


Insert the card in the card reader.

If there is not enough money on the card to start a program, the text "Insufficient funding" appears. The laundry account must then be "filled up" before it can be used to start the machine.

 (<Reserve>, <Balance> and <SMS?> are options. They can be used without money on the card)

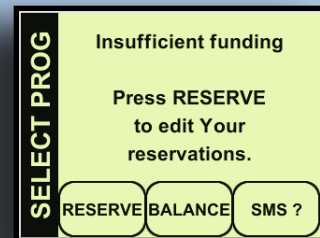


Select a program on the machine.

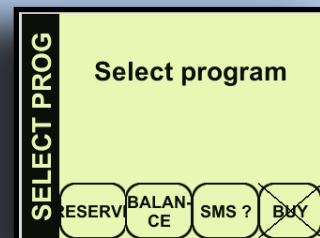 

Price for the selected program is displayed.
Verify program selection, press <Buy>



 The card can be removed, and the machine can be started by pressing the start button on the machine.

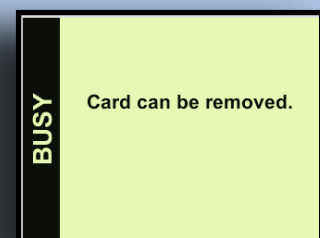


SMS-reminder

Option

Insert the card in the card reader and press
<SMS?>

 (<Reserve>, <Balance> and <SMS?> are options)

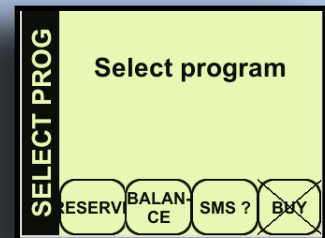


Enter the desired mobile number. (Norwegian
with 8 digits only)

Entered digits can be deleted with <C>

Confirm by pressing <√>

 
Cancel by pressing <X>

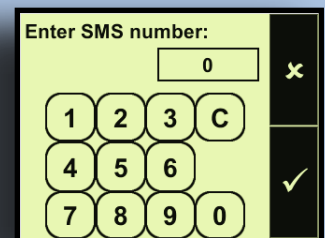

Confirmation emerges

If there is a price for the issue, the price is
shown.

 Confirm with <Yes>, or <No> if you do not want
SMS

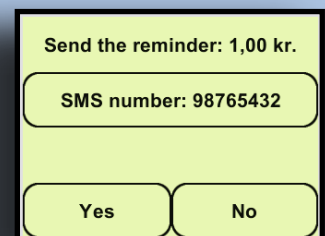

Reservation

Option

Insert the card in the card reader and press **<Reserve>**

 
 
 
Date, time and the machine is to be selected in desired order.

(**<Reserve>**, **<Balance>** and **<SMS?>** are options)

Date, Time and Machine is to be selected in the desired order.

Confirmation is displayed. Accept with **<OK>**

SMS reminder for upcoming reservation. The information can be edited by pressing the respective buttons.

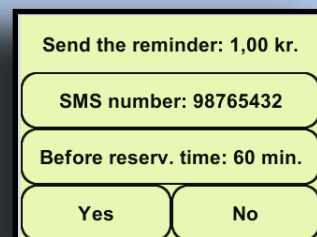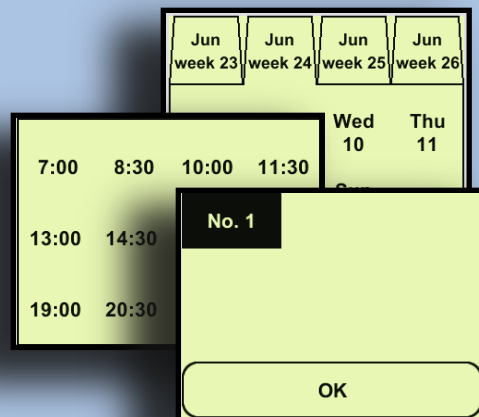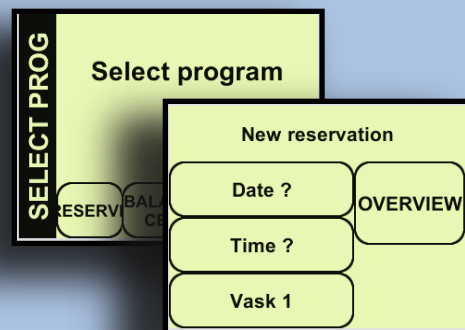


Balance

Option

Insert the card in the card reader and press

<Balance>

 (<Reserve>, <Balance> and <SMS?> are options)

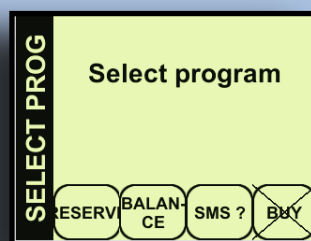

Balance, consumption last month, and so far this month appear.

The consumption information applies only to consumption in the current laundry, and does not include what is washed for in any other laundries the user has access to.

Balance is the same in all laundries

The image shows a yellow screen with the following data:

PURCHASES IN THE TIME PERIOD	
01-05-2009 to 31-05-2009	0.00
01-06-2009 to 05-06-2009	0.00
BALANCE	100.00

At the bottom of the screen, there is a button labeled "FINISH".