


## Captive Portal step-by-step guide

### **Landing page**

When you connect to the new wireless router you will be redirected to a landing page:

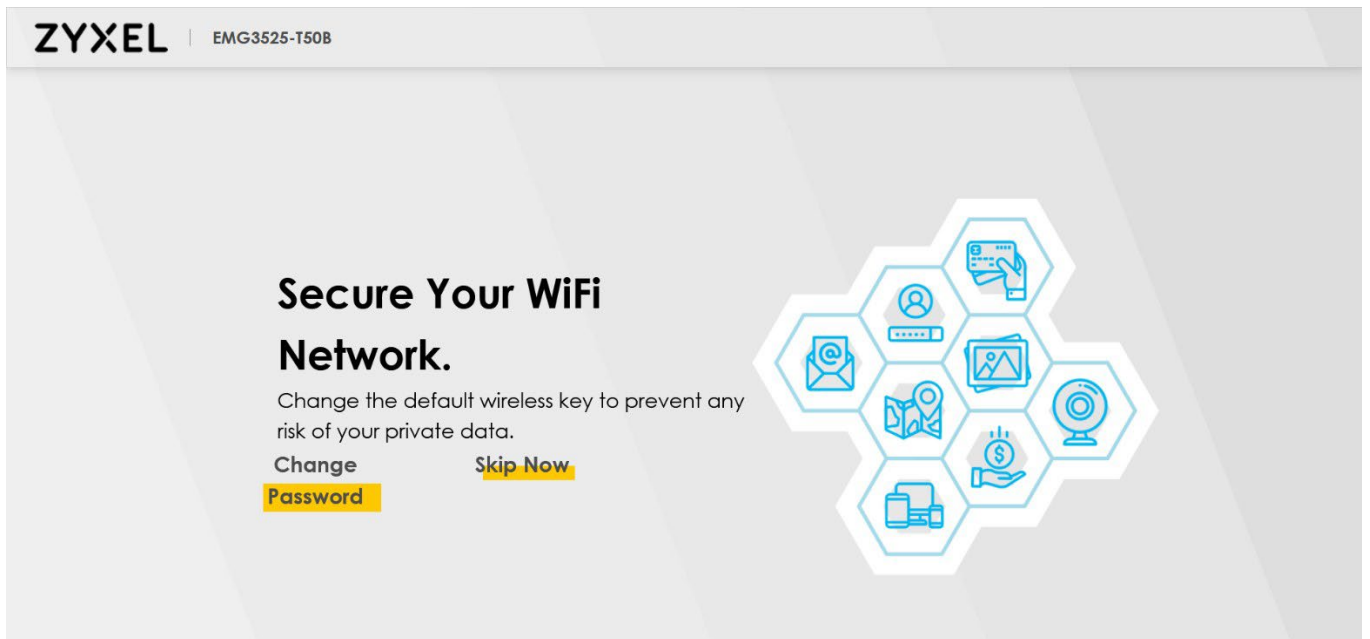


At this page you will have two alternatives:

1. *Change Password*
2. *Skip Now*

*Telia strongly recommends changing the default wireless password to prevent any risk of your private data.*

### Login

When clicking [Change Password](#), you will be asked for a **Username** and **Password** to log into the router:

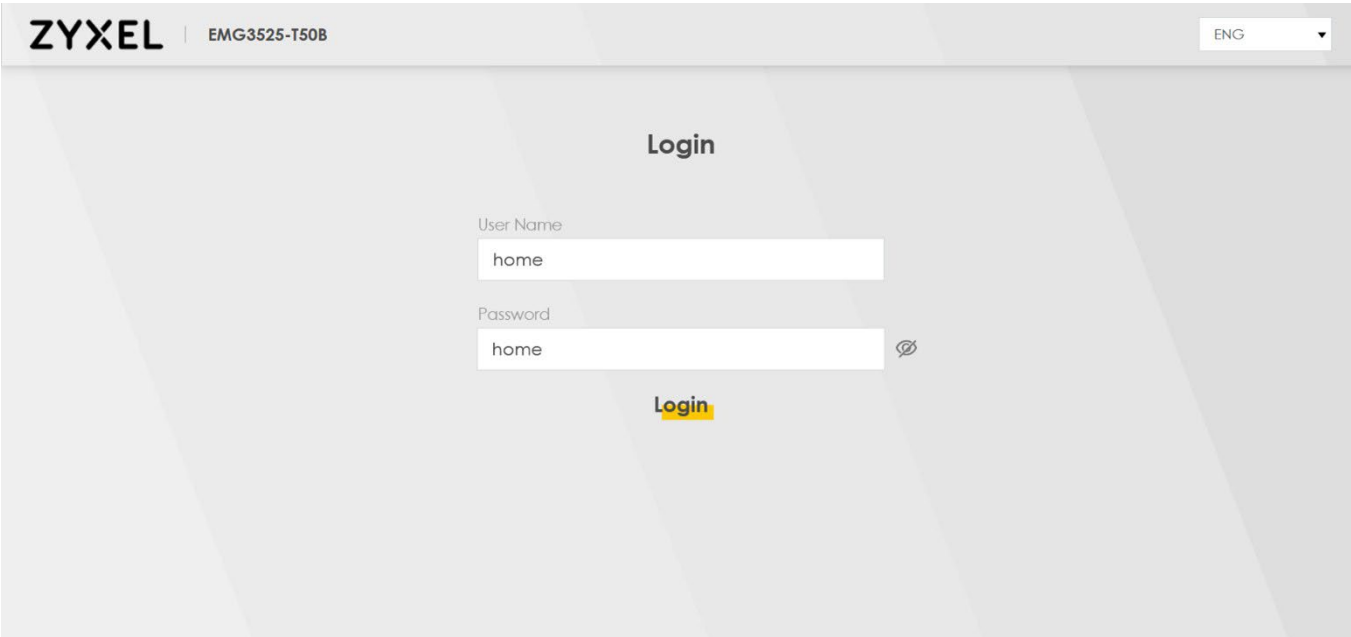

The screenshot shows the ZYXEL router login interface. At the top left, the ZYXEL logo and model number EMG3525-T50B are displayed. At the top right, there is a language dropdown menu set to 'ENG'. The main heading is 'Login'. Below this, there are two input fields: 'User Name' with the value 'home' and 'Password' with the value 'home'. A small eye icon is visible to the right of the password field. A yellow 'Login' button is positioned below the password field.

Enter the following credentials:


Username: **home**

Password: **home**



### **Change password:**

When clicking [Login](#), you will be asked to change the Wi-Fi password:

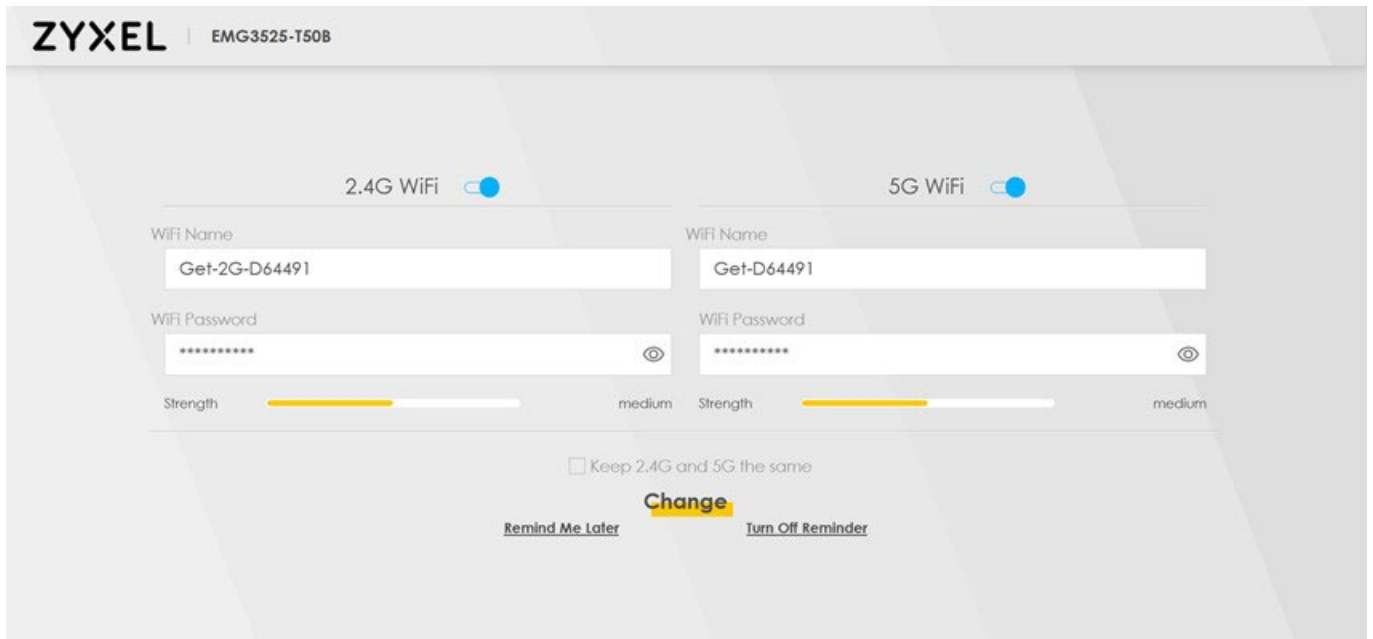

ZYXEL | EMG3525-T50B

2.4G WiFi  5G WiFi

WiFi Name: Get-2G-D64491 WiFi Name: Get-D64491

WiFi Password: \*\*\*\*\* WiFi Password: \*\*\*\*\*

Strength: medium Strength: medium

Keep 2.4G and 5G the same

[Remind Me Later](#) **Change** [Turn Off Reminder](#)

Telia recommends a strong and safe password with at least 10 characters in length and a combination of:

- Uppercase characters
- Lowercase characters
- Numbers
- Special characters (for example: !, \$, #, %)

Remember to change the password for both the 2.4G and 5G interfaces.  
Changing the Wi-Fi name is optional.

Press [Change](#) when the Wi-Fi password (and potentially the Wi-Fi name) has been chosen.  
Now you will be able to use the internet safely without any further messages.

